

CLEANING AND MAINTANCE


Laminates non-porous surface means it does not accumulate dirt. The adherence and proliferation of fungi and bacteria on its surface is therefore significantly impaired. Its stability and mechanical resistance also make it very easy to clean and preserve, allowing for effective disinfection and fomite elimination. Wipe down with a damp cloth soaked in a household cleaning product that does not contain wax, silicone, solvents, or any highly aggressive products. Disinfection products are allowed as listed below.

Perforation

The surfaces of acoustical equipment need to be perforated, allowing for sound waves to penetrate the panel for optimal sound absorption. Surface resting pathogens are eliminated by regular cleaning and disinfection. As the inner perforation surfaces are not reachable and cannot be touch, the perforation holes do not contribute to any pathogenic agent transmission.

MedLine

Lyra 8 CL Panelling
Norma 8 CL Panelling

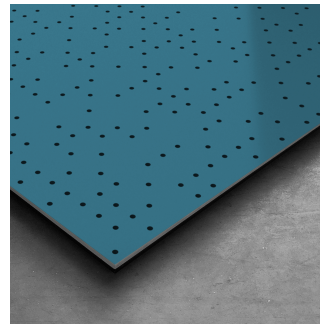

Surface Material:

Laminates

Composition:

Vinyl / Urethane Topcoat

Features:

- Heat Resistant
- Moisture and stain resistant
- Impact and scratch resistant
- Hygienic and anti-allergy
- Easy to Clean
- Ecologically Sound
- Resistance to Grafitti
- Variety of colors, patterns and finishes
- Colour Stability (does not discolour)
- Dissipative

Desinfection Products:	Recommended:	Purpose/ Use:
Neutral liquid soap and water	Yes	General Cleaning
Neutral detergent and water	Yes	General Cleaning
Ammonia	Yes	General Cleaning (3 spoonfuls per liter of water)
Solvent	Yes	Glue, wax, grease based stains etc.
Alcohol	Yes	Ink stains
1% Sodium Hypochlorite	Yes	Disinfecting
1% Phenol	Yes	Final cleaning
Turpentine	No	Greases and stains
Kerosene	No	Greases and stains
Pure Sodium Hypochlorite	No	Can stain if not removed immediately
Wax	No	Greases and stains
Scouring Powders	No	Abrasive
Steel Wool	No	Abrasive and scratches
Thinner	No	Greases and stains
Varsol	No	Greases and stains